
26B2-VPK 13B2-VPK

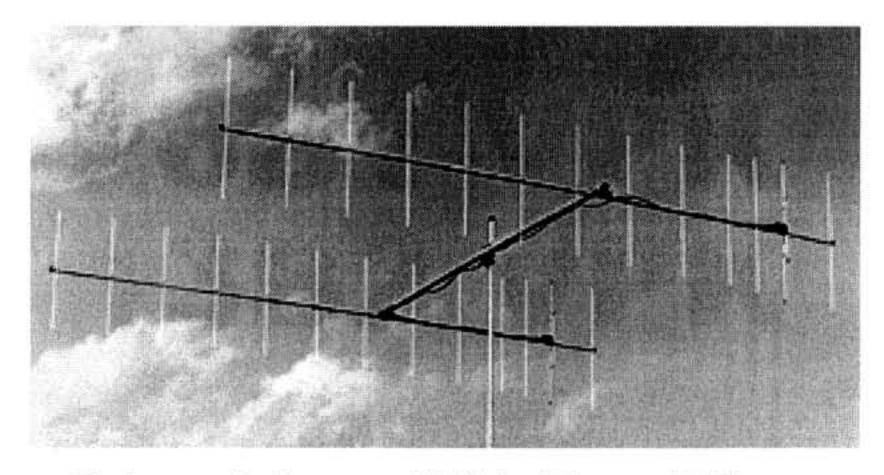

Stacking Kit For The Cushcraft 13B2 Boomer




ASSEMBLE STACKING BOOM


Assemble the stacking boom as shown below. Slide worm clamps (414) onto the slotted ends of tube BE. Insert tubes BD approximately 14 inches (35.6 cm) into tube BE and align the drilled holes. Join the masts with screw (120), washer (41) and nut (11). Tighten the screws and worm clamps. Mount the stacking mast to mast plate (130) in the center of the tube BE as shown on figure E. Use the U-bolts (404), V-blocks (63), lock washers (119) and nuts (118) as shown in figure F. Push the plastic caps (41) onto the ends of the mast.

KEY	P/N	DISPLAY	DESC	SIZE	QTY
1	050041	G	PLASTIC CAP	1-5/8° (4.1 cm)	2
11	010011		SS HEX NUT	8-32	2
41	011941		SS LOCK WASHER	#8	2
120	010120	()	SS MACHINE SCREW	8-32 x 2" (5.1 cm)	2

KEY	P/N	DISPLAY	DESC	SIZE	QTY
414	030414	ð	SS WORM CLAMP	1-5/8" (4.1 cm)	2
BD	26B2BD		ALUM TUBING	1-5/8 x 48" (4.1 x 121.9 cm)	2
BE	26B2BE	===	ALUM TUBING	1-3/4" x 48" (4.4 x 121.9 cm)	1

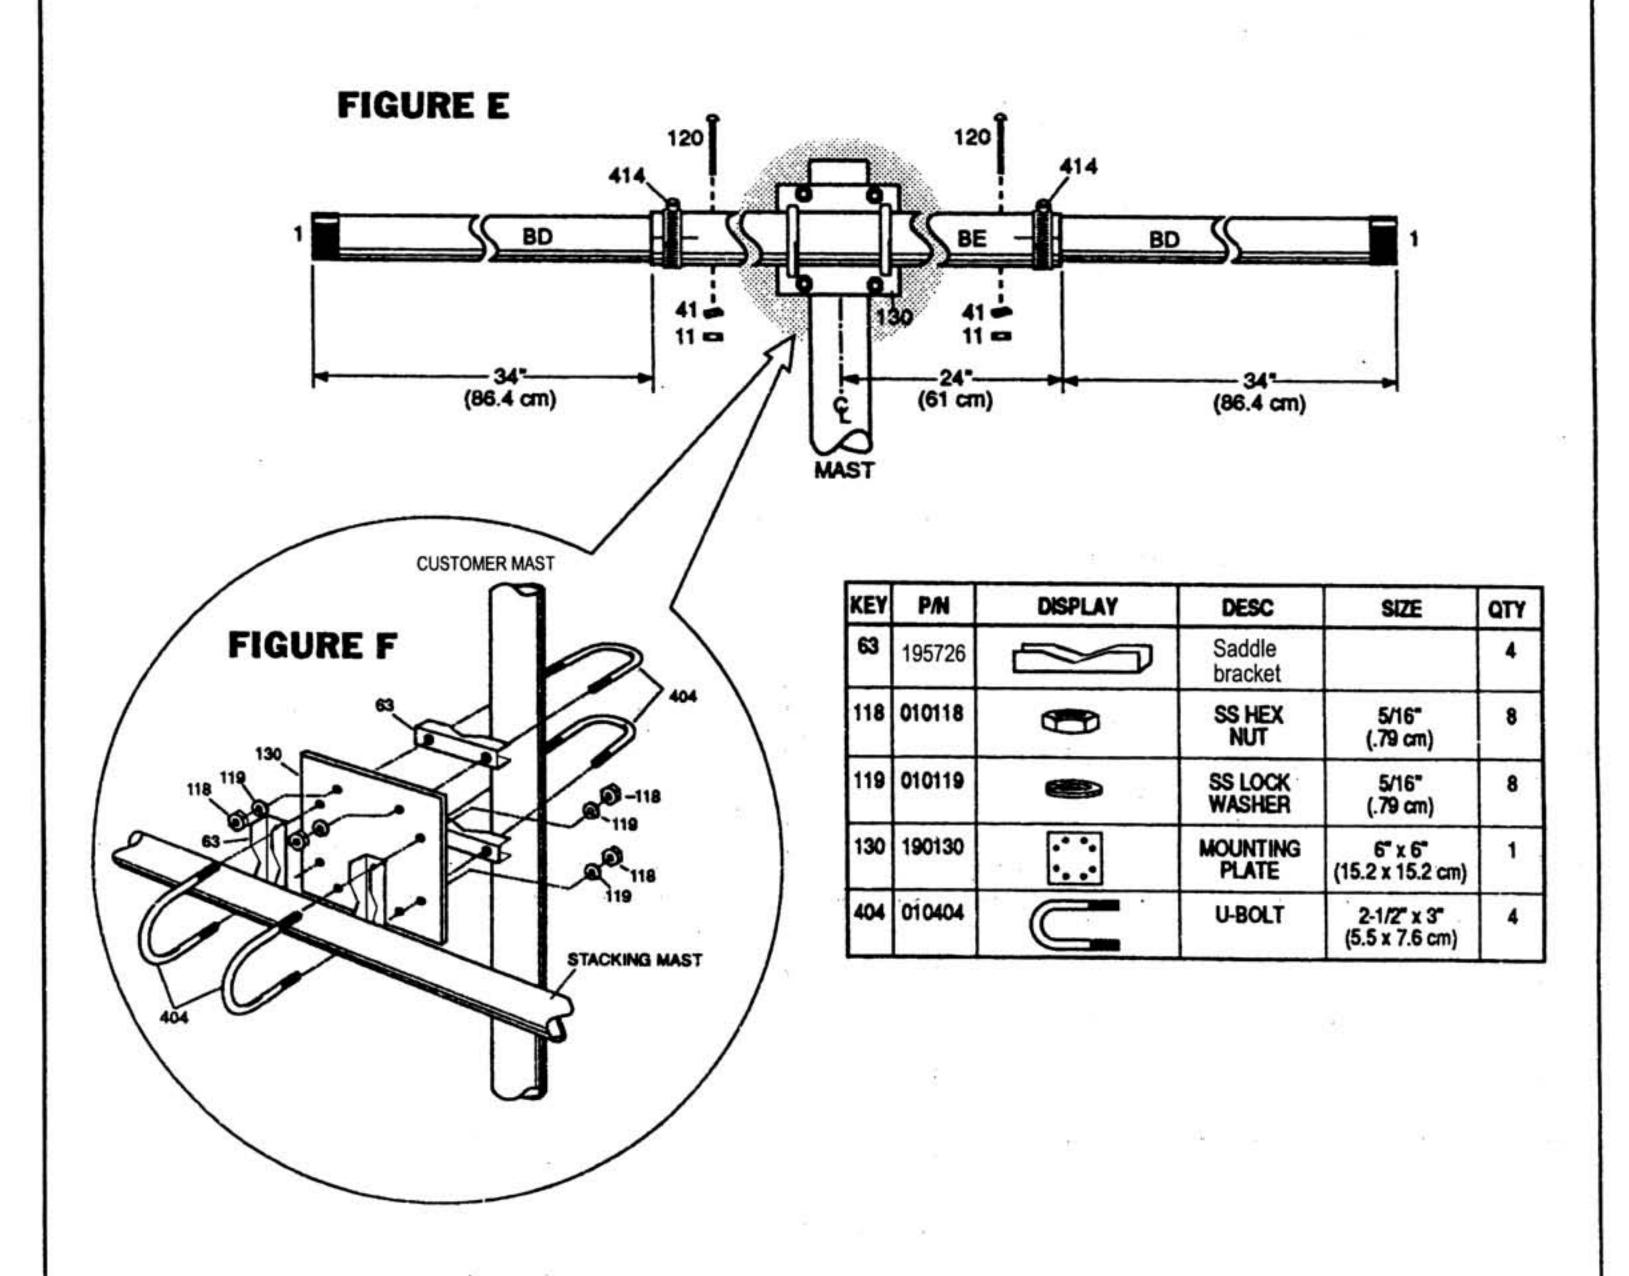


Use the 13B2 manual for assembly of the two antennas. Assemble and mount the boom to mast clamp bracket between elements 6 and 7 with the u-bolts as shown in the figure. Note that the rear of the mast clamp must be 3 inches from the element 6 as shown in the 13B2 manual.

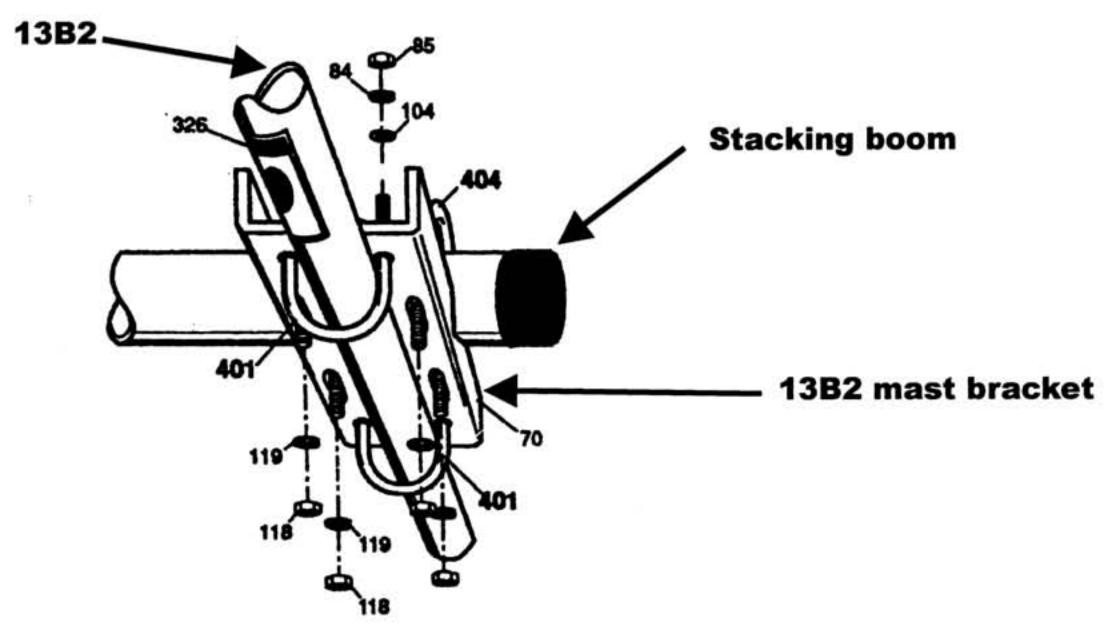

Assemble the phasing mast to your vertical mast as shown. Center each antenna 3 inches from the ends of the phasing mast which will place the antennas 110 inches apart. Make sure both UltraMatches are facing in the same direction for proper phasing. That is to say, all Ultramatches must be on

silicone grease. Tape the phasing lines to the mast.

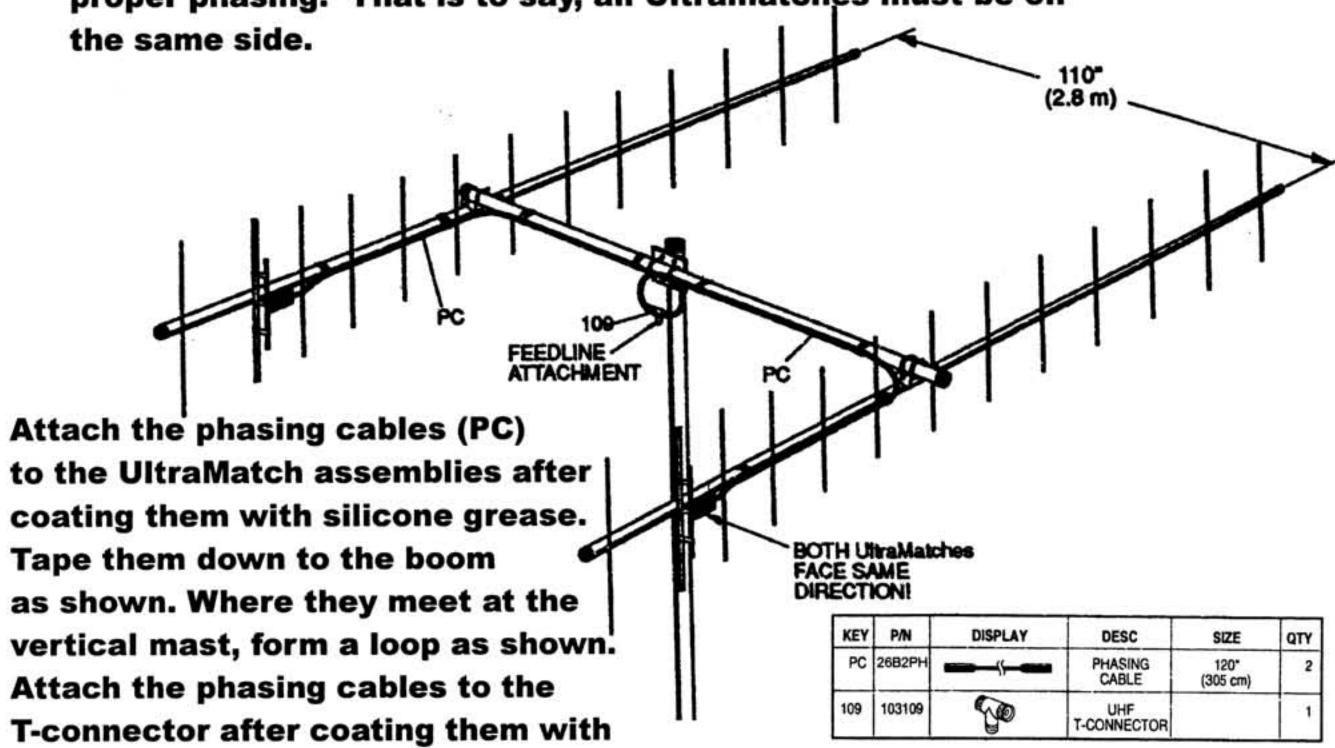


GENERAL INSTALLATION INSTRUCTIONS FOR MAST MOUNTED ANTENNAS

- Assemble your new antenna on the ground at the installation site. Keep separate assembly instructions that come with it. Large CB and Amateur beams may have to be finally assembled on the tower or mast.
- On the ground, clamp the antenna to mast and connect the coaxial cable to the antenna.
- 3. To insure that the mast does not fall the "wrong way" if it should get away during the installation or takedown, durable non-conductive rope should be secured at each two foot level as the mast is raised. The boss stands in a position where he can yank or pull the ropes if the need arise to deflect the falling mast away from hazards (such as power lines) into a "safe fall" (such as a yard or driveway). The ropes are tied taut at the base of the mast after installation and in place at the various levels.
- 4. Install selected mounting bracket.
- 5. If you are going to use guy wire installation instead of a mounting bracket:
 - install guy anchor bolts
 - · estimate length of guy wire and cut
 - · attach a mast using guy ring
- Carefully take antenna and mast assembly to mounting bracket and insert.
 Tighten camp bolts. In case of guyed installation, it will be necessary to have at least a second person hold the mast upright while the guy wires are attached and tightened to the anchor bolts.
- Install self-adhering "DANGER" label packaged in antenna hardware kit at eye level on your mast.
- Install ground rod to drain off static electricity build-up and connect ground wire to mast and ground rod. Use special ground rods, not a spare piece of pipe.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE INSTRUCTIONS

- Use No. 10 AWG copper or No. 8 AWG or larger copper-dad steel or bronze wire, as ground wires for both mast and lead-in. Securely clamp the wire to the bottom of the mast.
- Secure lead-in wire from antenna to antenna discharge unit and mast ground wire to house with stand-off insulators spaced from 4 feet (1.2 meters) to 6 feet (1.8 meters) apart.
- Mount antenna discharge unit as close as possible to where the lead-in wire enters the house.
- Drill a hole in wall (CAREFUL! There are wires in that wall.) near your set just large enough to permit entry of cable.
- Push cable through hole and form a rain drip loop close to where it enters the house.
- Put small amount of caulking around cable where it enters house to keep out drafts.
- Install static electricity discharge unit.
- 8. Connect antenna cable to the set.

You should not attempt to raise a mast in excess of 30 feet in height/length (not including the antenna proper) in a fully-extended condition. Thirty to fifty foot tubular masts must be elevated, a section at a time, with the base or outer section secured in place with guy wires. GET PROFESSIONAL HELP.

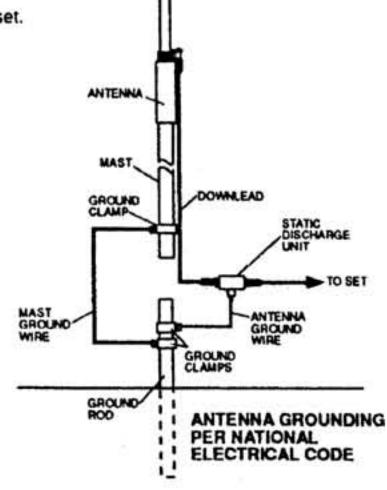

WARNING

INSTALLATION OF THIS PRODUCT NEAR POWER LINES IS DANGEROUS. FOR YOUR SAFETY, FOL-LOWTHEENCLOSED INSTALLATION DIRECTIONS.

HOW TO INSTALL YOUR OUTDOOR ANTENNA SAFELY IN AC-CORDANCE WITH THE RECOMMENDATIONS OF THE U.S. CON-SUMER PRODUCT SAFETY COMMISSION

YOU, YOUR ANTENNA, AND SAFETY

Each year hundreds of people are killed, mutilated or receive severe permanent injuries when attempting to install an antenna. In many of these cases, the victim was aware of the danger of electrocution, but did not take adequate steps to avoid the hazard.

For your safety, and to help you achieve a good installation, please READ and FOLLOW the safety precautions below. THEY MAY SAVE YOUR LIFE!

- If you are installing an antenna for the first time, please, for your own safety as well as others, seek PROFESSIONAL ASSISTANCE. Consult your dealer. He can explain which mounting method to use for the size and type antenna you are about to install.
- Select your installation site with safety, as well as performance, in mind. (Detailed information on Site Selection appears in a separate section of this booklet.) REMEMBER: ELECTRIC POWER LINES AND PHONE LINES LOOK ALIKE. FOR YOUR SAFETY, ASSUME THAT ANY OVERHEAD LINES CAN KILL YOU.
- Call your electric power company. Tell them your plans and ask them
 to come look at your proposed installation. This is a small inconvenience considering YOUR LIFE IS AT STAKE.
- 4. Plan your installation procedure carefully and completely before you begin. Successful raising of a mast or tower is largely a matter of coordination. Each person should be assigned to a specific task, and should know what to do and when to do it. One person should be designated as the "boss" of the operation to call out instructions and watch for signs of trouble.
- When installing your antenna, REMEMBER:
 DO NOT use a metal ladder. DO NOT work on a wet or windy day.
 DO dress properly –shoes with rubber soles and heels, rubber gloves, long sleeve shirt or jacket.
- 6. If the assembly starts to drop, get away from it and let it fall. Remember, the antenna, mast, cable and metal guy wires are all excellent conductors of electrical current. Even the slightest touch of any of these parts to a power line complete an electrical path through the antenna and the installer—THAT'S YOU!
- If any part of the antenna system should come in contact with a power line-DON'T TOUCH IT OR TRY TO REMOVE IT YOUR SELF. CALL YOUR LOCAL POWER COMPANY. They will remove it safely.

If an accident should occur with the power lines call for qualified emergency help immediately.

SITE SELECTION


Before attempting to install your antenna, think where you can best place your antenna for safety and performance.

To determine a safe distance from wires, power lines and trees:

- Measure the height of your antenna.
- 2. Add this length to the length of your tower or mast, and then
- 3. Double this total for the minimum recommended safe distance.


If you are unable to maintain this safe distance, STOP! GET PROFES-SIONAL HELP. Many antennas are supported by pipe masts attached to the chimney, roof or side of the house. Generally, the higher the antenna is above the ground, the better it performs. Good practice is to install your antenna about 5 to 10 feet above the roof line and away from power lines and obstructions. Remember that FCC limits your antenna height to 60 feet. If possible, find a

mounting place directly above your set, where the antenna wire can take a short, vertical drop on the outside of the house for entry through a wall or window near the set. Your dealer carries a complete line of installation hardware.

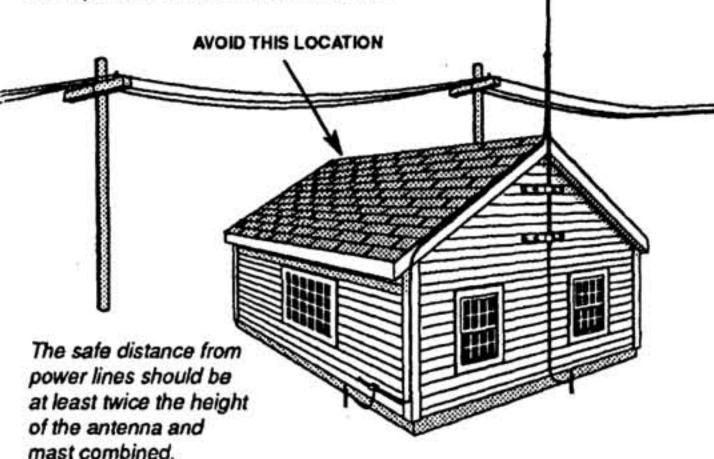

CHOOSE A PROPER SUPPORT AND MOUNTING METHOD

However you decide to mount and support your antenna always make sure that safety is your first concern. Some of the more common installation methods are illustrated below.

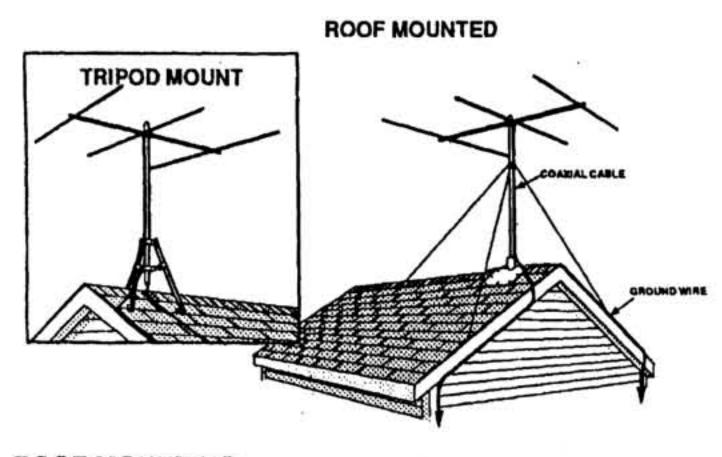

ROOF MOUNTING

The swivel feature of "universal" type mounting brackets makes a convenient antenna mount for flat or peaked roofs. One clamp type bracket is used with 3 or 4 guy wires equally spaced around the mast and anchored to the roof or eaves by eyebolts. Apply roofing compound around the base of the bracket, screws and eyebolts for moisture sealing.

TELESCOPING MAST


Guy wires should be equally spaced in at least three directions. Use at least three guy wires for each 10 foot section of mast.

SIDE OF HOUSE MOUNTING

The safe distance from power lines is at least twice the height of antenna and mast combined. Where roof overhang is not excessive, the side of the house provides a convenient mounting. Position the brackets over a stud if possible, one above the other, and space two or three feet apart. For metal siding, first mark mounting holes, then drill pilot holes through the siding to accept mounting screws.

TOWER

Tower safety is paramount to a good installation and requires that you take location, tree growth, soil depth and proximity to buildings into consideration. Tower foundations must be securely based on a solid concrete/ tower mounting plate. An alternative is to sink a 4-6 foot section of tower into a concrete base for an extremely rugged mount. Proper guying is essential to a safe weather-resistant installation that must handle severe wind loading and is best accomplished with preformed guy grips, torque brackets and turnbuckles. When working on

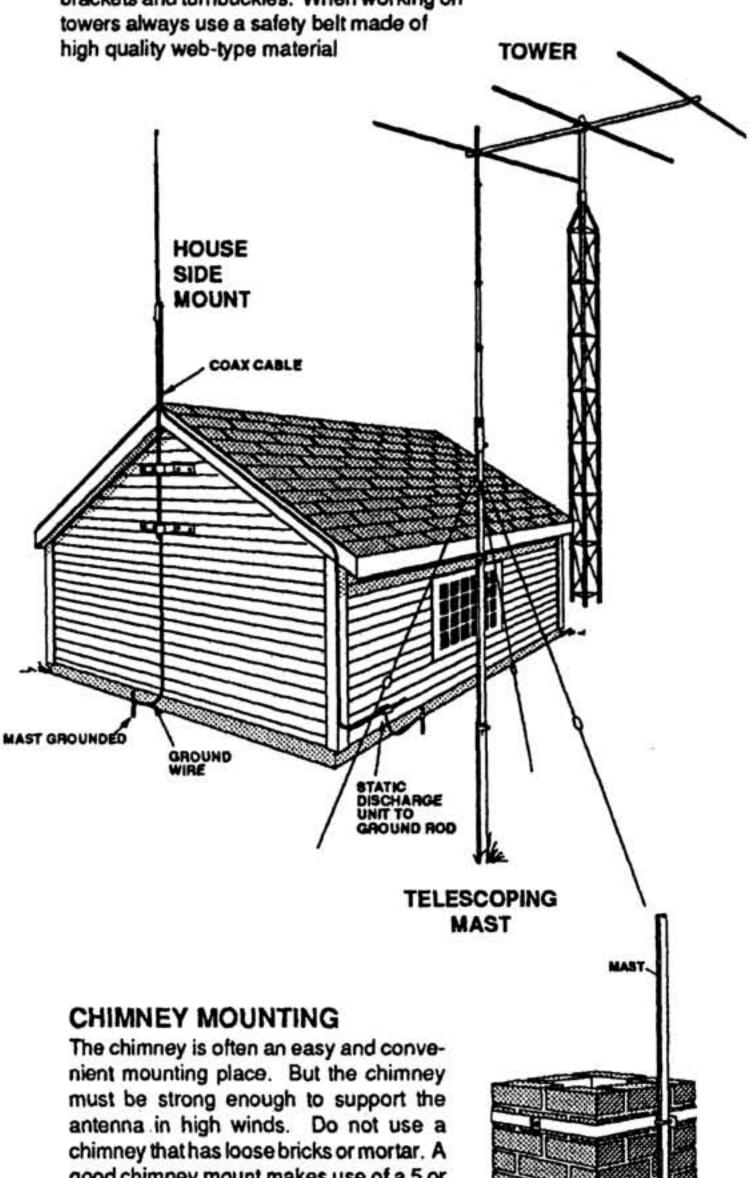

The chimney is often an easy and convenient mounting place. But the chimney must be strong enough to support the antenna in high winds. Do not use a chimney that has loose bricks or mortar. A good chimney mount makes use of a 5 or 10 foot, 1-1/4" diameter steel mast, and a heavy duty two strap clamp-type bracket. Install the upper bracket just below the top course of bricks, and the lower bracket two or three feet below the upper bracket. For maximum strength, space the brackets as far apart as possible.

LIMITED WARRANTY

Cushcraft Amateur Radio Antennas, 308 Industrial Park Rd., Starkville, MS 39759, warrants to the original consumer purchaser for one year from date of purchase that each Cushcraft antenna is free of defects in materials or workmanship. If, in the judgment of Cushcraft, any such antenna is defective, then Cushcraft Amateur Radio Antennas will, at its option, repair or replace the antenna at its expense within thirty days of the date the antenna is returned (at purchasers expense) to Cushcraft or one of its authorized representatives. This warranty is in lieu of all other expressed warranties, any implied warranty is limited in duration to one year. Cushcraft Amateur Radio Antennas shall not be liable for any incidental or consequential damages that may result from a defect. Some states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. This warranty does not extend to any products that have been subject to misuse, neglect, accident or improper installation. Any repairs or alterations outside of the Cushcraft factory will nullify this warranty.



300 Industrial Park Rd., Starkville, MS 39759 Phone: 662-323-5803 Fax: 662-323-6551 www.CushcraftAmateur.com